


# CAB Door & Frame Fitting Instructions

**1.**

Place frame in coldroom opening.  
Ensure frame is level square and supported.  
Screw frame into position, taking care not to distort the frame.

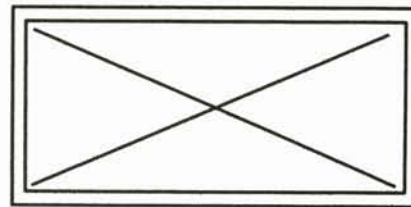

To Place Doors into Frame **2.**

Ensure door return spring assembly is in door.



**3.**

Place door on to top pin then lower door into hexagonal hole.

**4.**

To Tension Door Return Spring  
Lift door so that hexagonal pin can be seen at bottom. Apply tension spanner (supplied) in direction of door closing.  
Lower door to lock pin.



**5.**

To adjust door sideways, slacken screws in hinge plate and move to suit

**6.**

Insert safety washer to top hinge pin.  
So that door cannot lift off hinges

